





**Roll-Over**

**180° Turn**

**90° Turn**

Cut the white mesh to shape the mats to fit any room. Any combination of mat sizes can be used up to 150 square feet per thermostat.

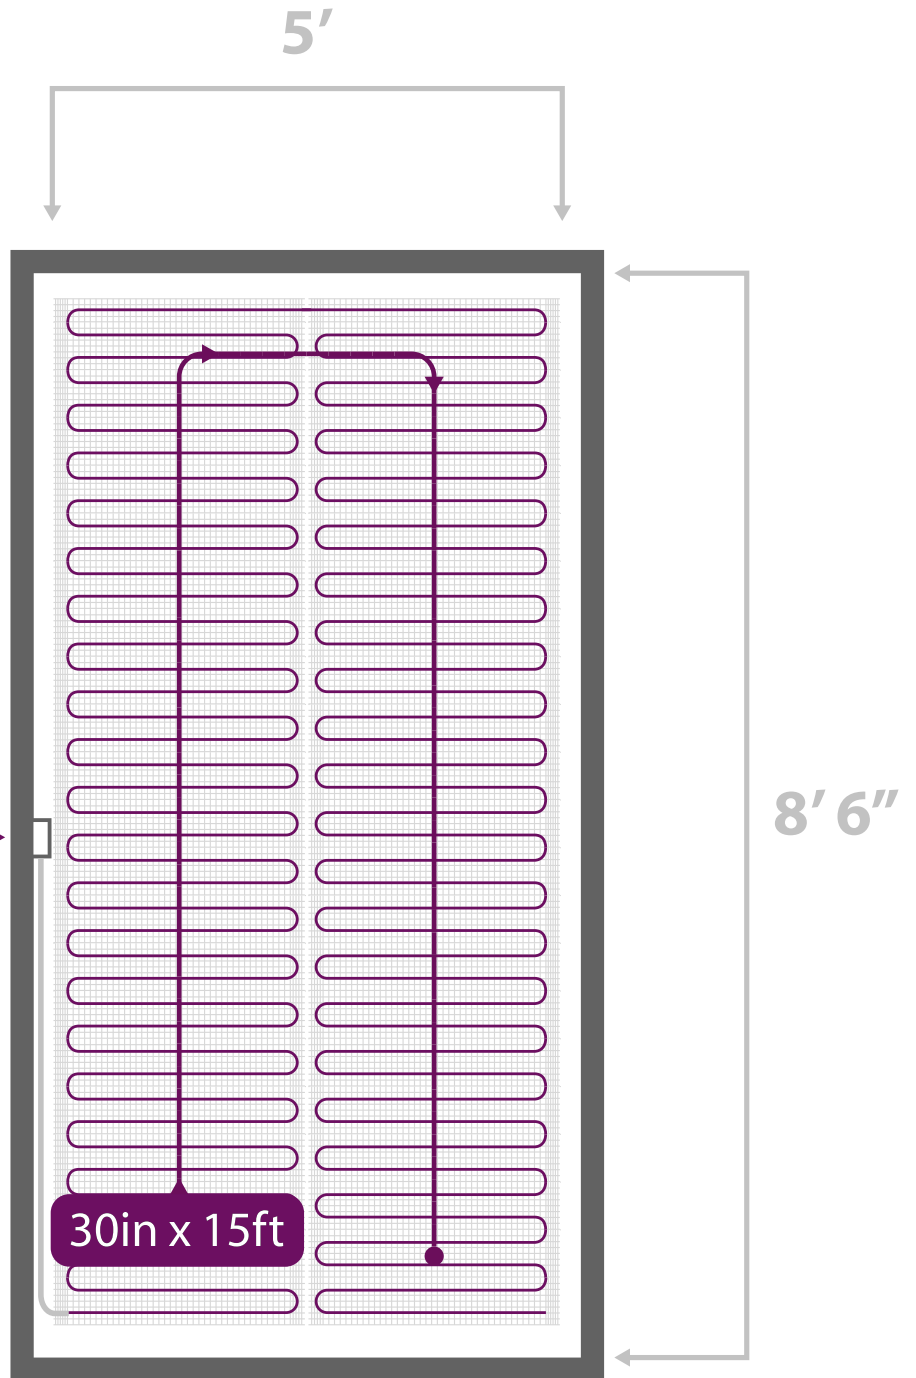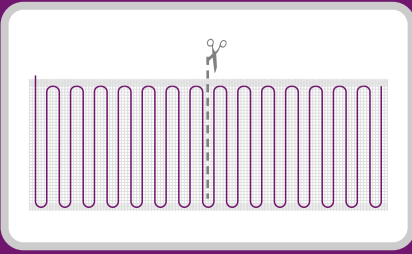

## When planning your project...

- Do NOT install under built-ins (cabinets, appliances, tubs, etc.).
- Do install up to the front of built-ins, so toes stay warm.
- Keep mats at least 4 inches away from toilet wax ring and 4-6 inches from walls.

This layout example is intended for illustrative purposes. Rooms may have more than one product combination and/or layout solution. Mat sizes used may no longer be available.